

BAR CODE SCANNER

PROGRAMMING BAR CODE SCANNER - LS SYMBOL /
MOTOROLA

USER MANUAL

ITKU-94-01-11-16-EN



RADWAG BALANCES AND SCALES
ADVANCED WEIGHING TECHNOLOGIES

Table of contents

1. Setting the Prefix and Suffix according to standard RADWAG	3
1.1. Setting the Prefix - Hex: 01	3
1.2. Setting the Suffix - Hex: 0d	4
2. Activation / Enable Prefix and Suffix	5
3. Deactivation / Disable Prefix and Suffix	5
4. Setting HID keyboard USB standard	6
5. Setting USB/RS323 Emulation (Windows 32bit).....	6
6. Setting USB/RS323 Emulation (Windows 64bit).....	6
7. Setting the RS232 interface	6

1. Setting the Prefix and Suffix according to standard RADWAG

1.1. Setting the Prefix - Hex: 01



**Scan Prefix
(07h)**



1



0



0



1

1.2. Setting the Suffix - Hex: 0d



Scan Suffix 1
(06h)



1



0



1



3

2. Activation / Enable Prefix and Suffix



Scan Options



<PREFIX> <DATA> <SUFFIX>



Enter

3. Deactivation / Disable Prefix and Suffix



Scan Options



*** Data As Is**



Enter

4. Setting HID keyboard USB standard



* HID Keyboard Emulation

5. Setting USB/RS323 Emulation (Windows 32bit)



Simple COM Port Emulation

6. Setting USB/RS323 Emulation (Windows 64bit)



USB CDC Host

7. Setting the RS232 interface



* Indicates Default *Baud Rate 9600 Feature/Option

